


MA3PR/FL





KammBar

Instructions


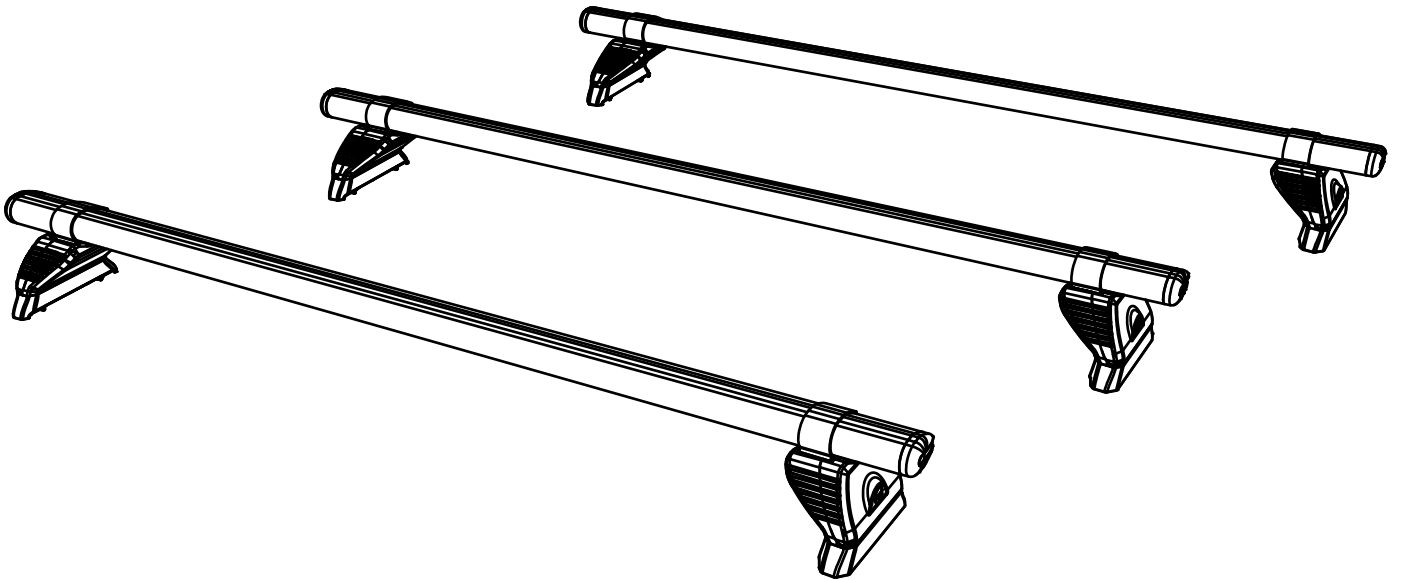


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

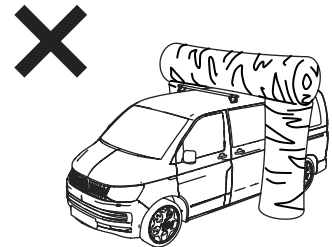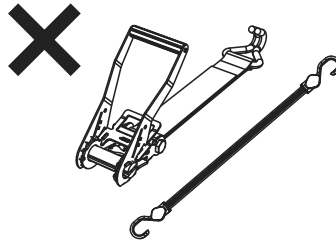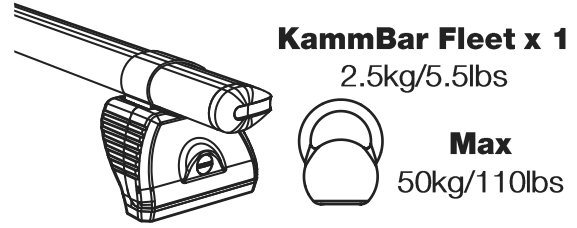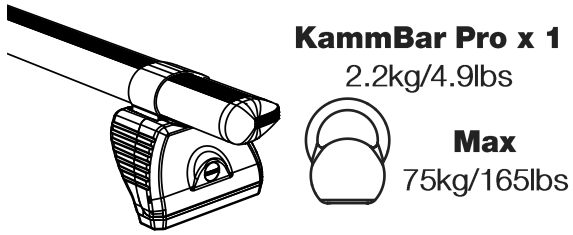


KammBar Pro

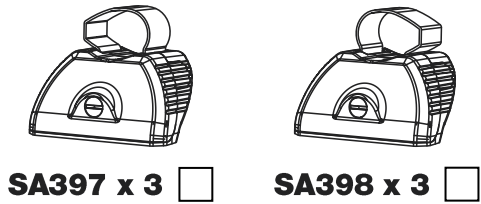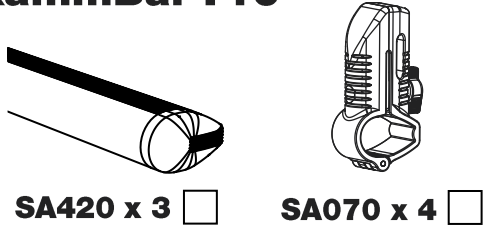

KammBar Fleet

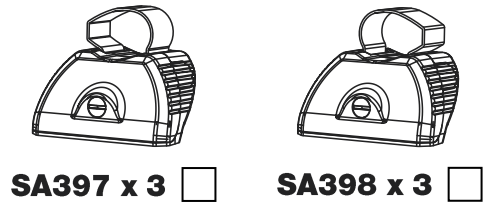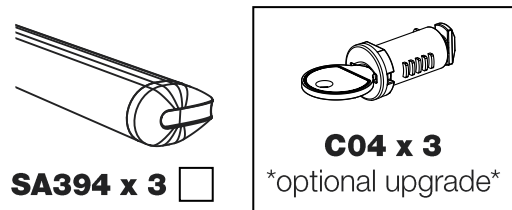


Fitting Kit

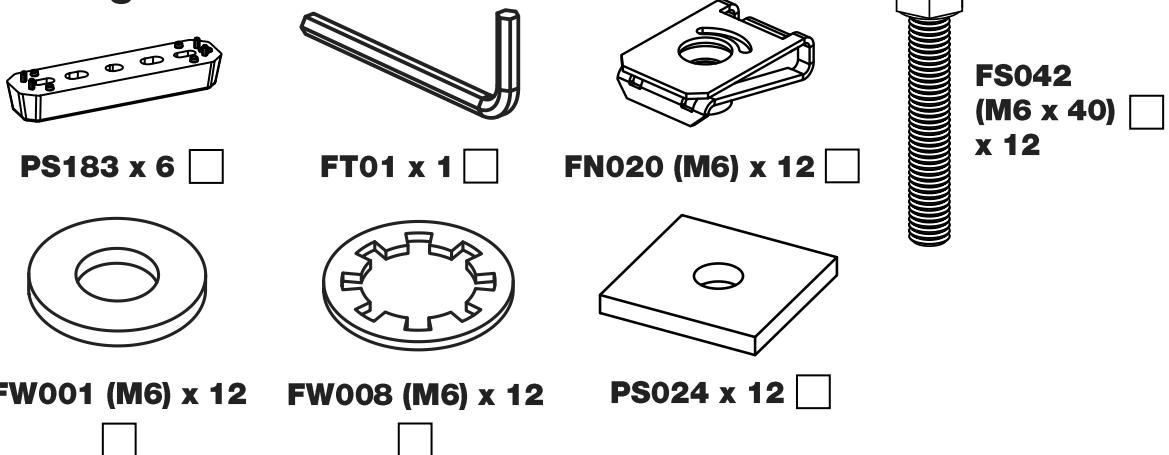

1.



2.

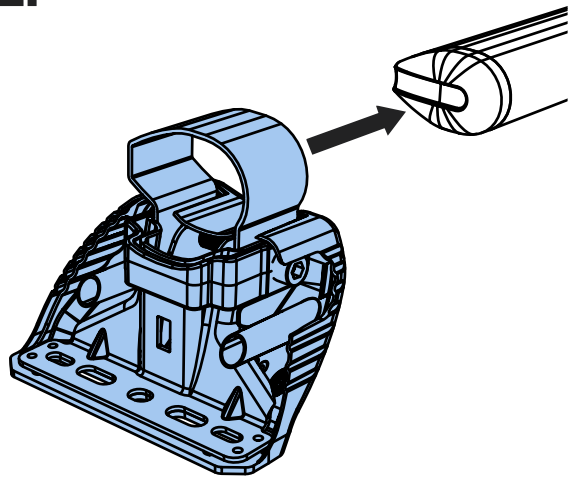


3.




SA397

PS183




SA397

PS183




SA397

PS183

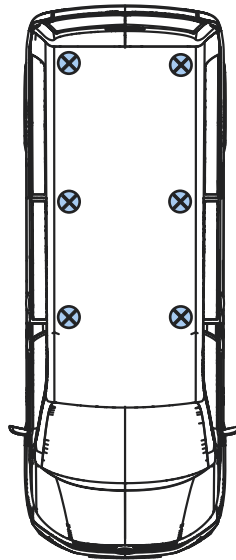


SA398




PS183

SA398




PS183

SA398




PS183


4.

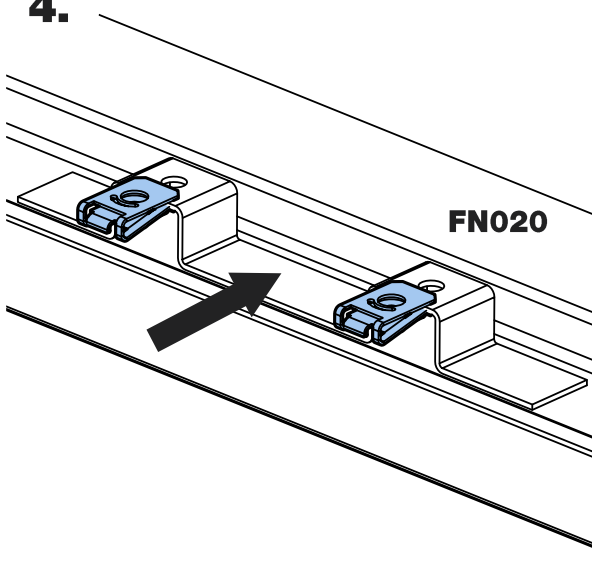


5.

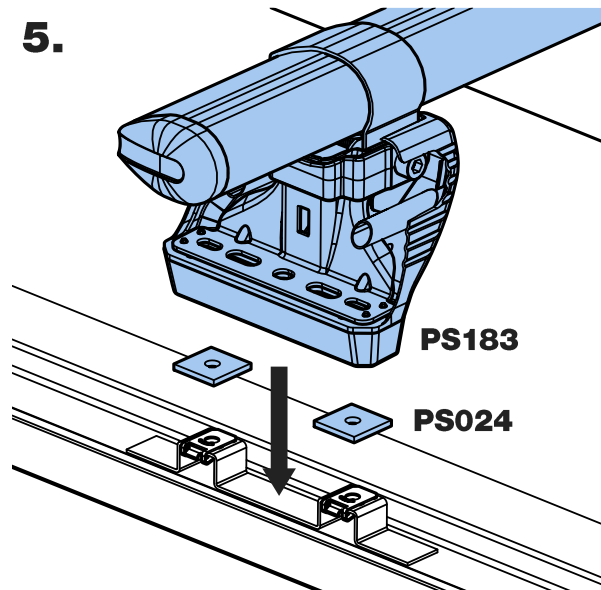


6.

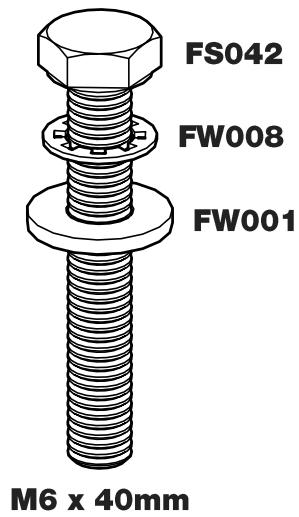


7.

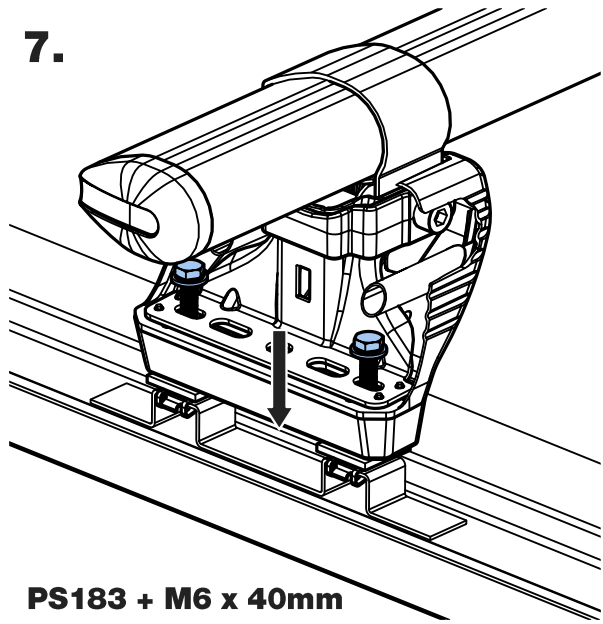


8.

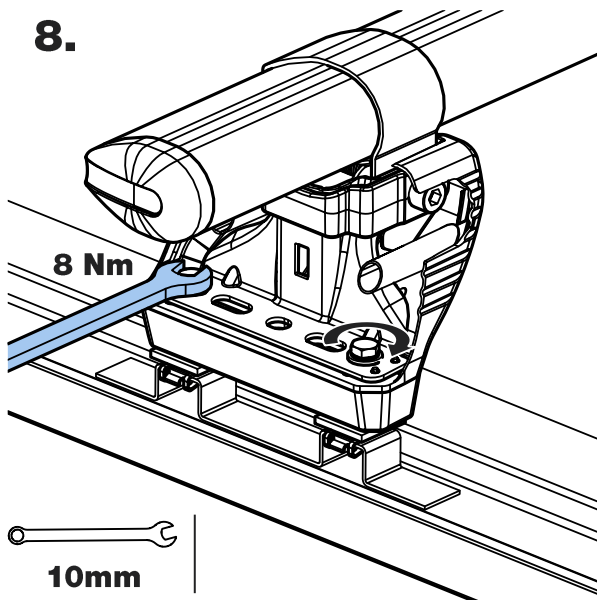


9.

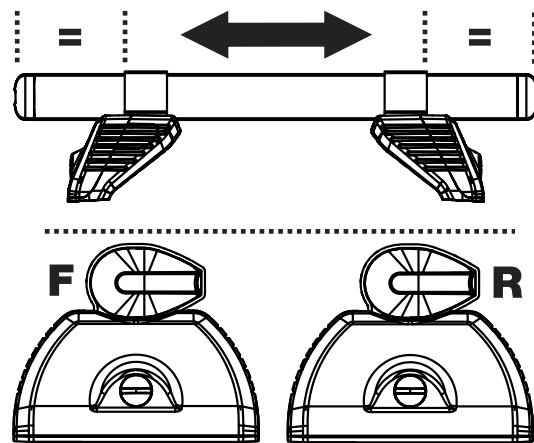


10.

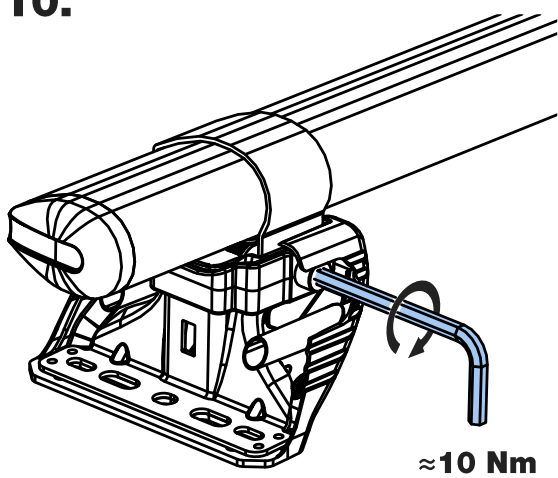

11.

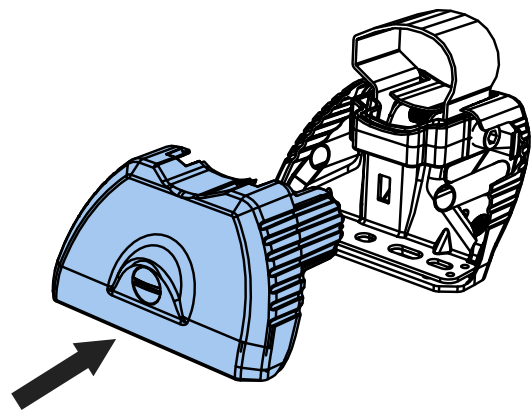

12.

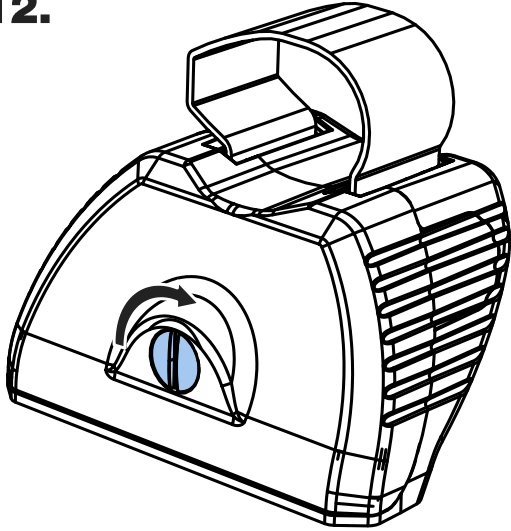

13.

