


FM001-L2

MR4


Instructions

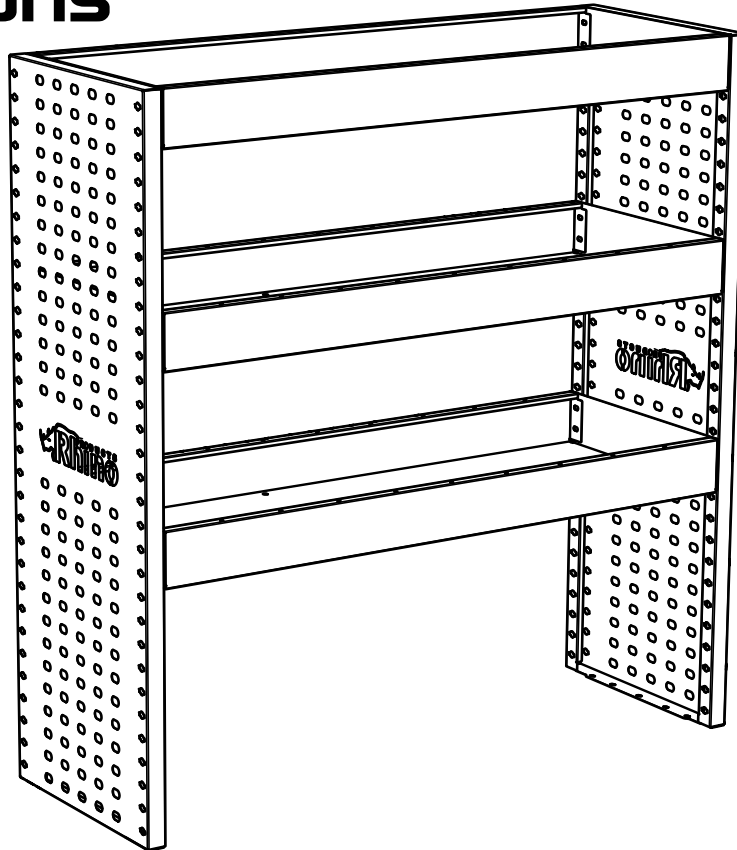




CITY CRASH (✓)

According to ISO/ PAS 11154:2006


MR4
Weight
 18.6kg
 /41.0lbs
 (Bay 1)

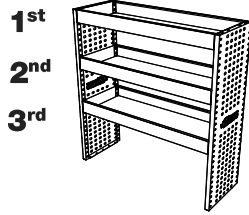


Shelf Max Load
1st 10.0kg/22.0lbs
2nd 35.0kg/77.2lbs
3rd 35.0kg/77.2lbs

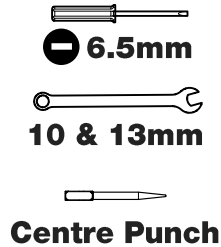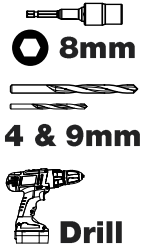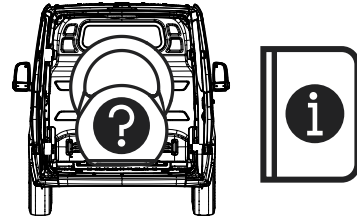


Assembly
 ≈25min
Fitment
 ≈25min

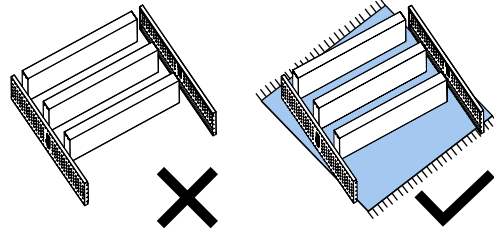


MR4

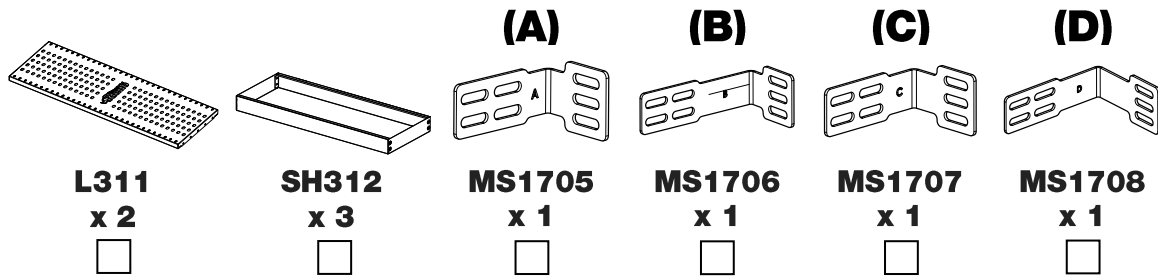

Fitting Kit


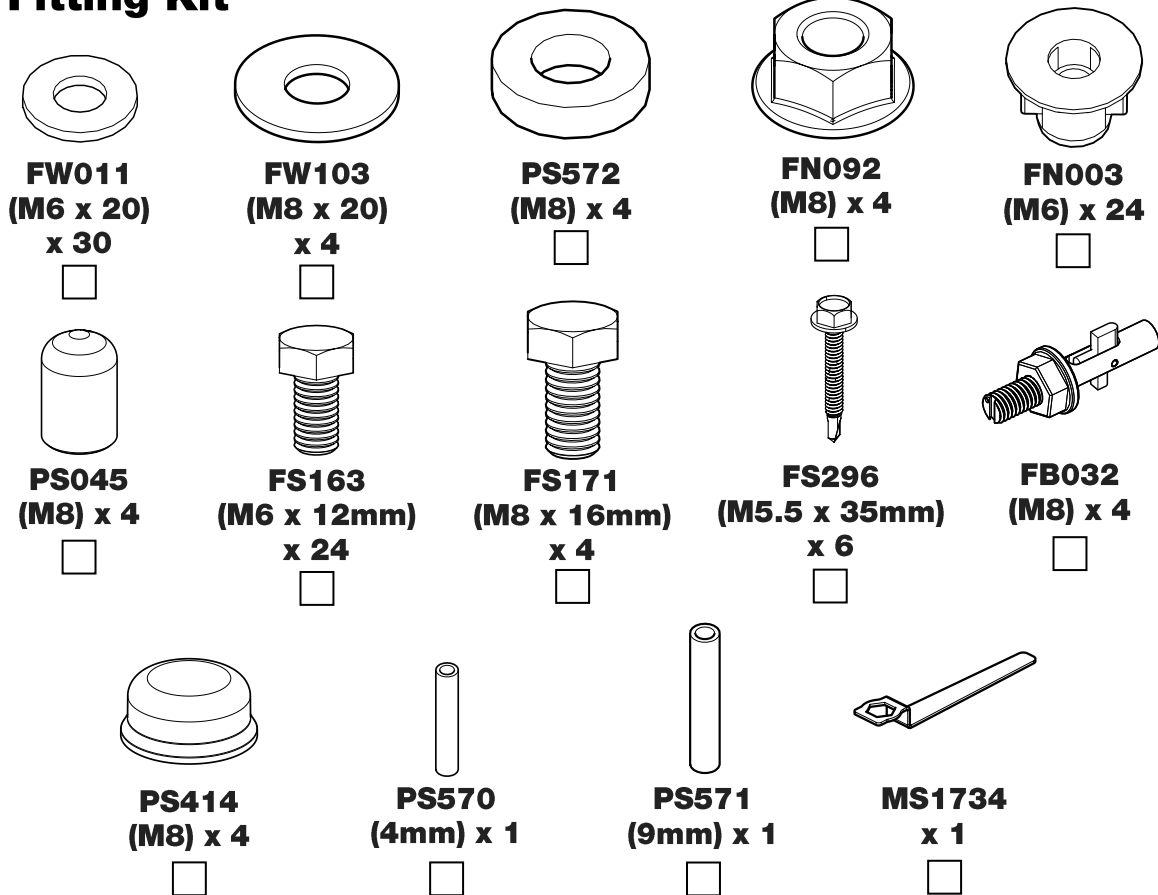








FORD TRANSIT CUSTOM (2013-) L2-H1

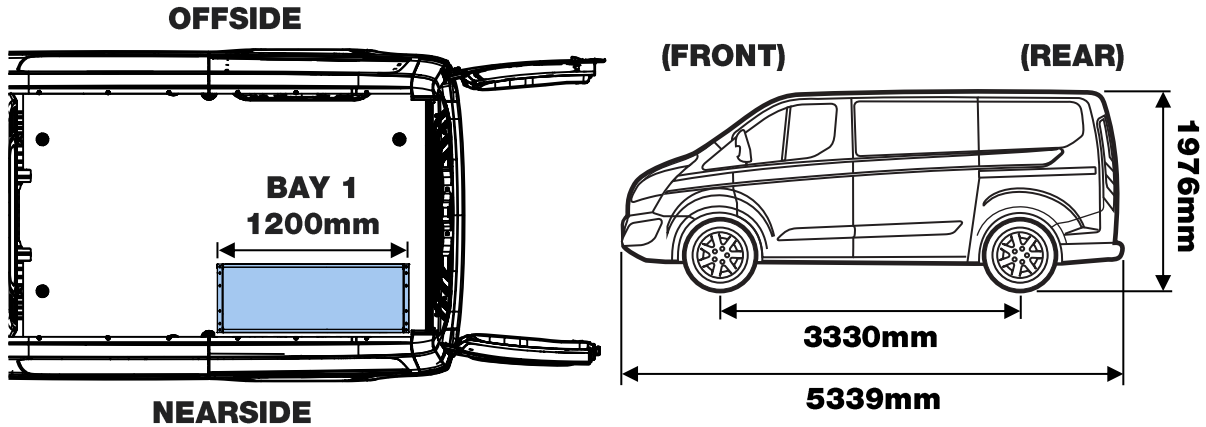

1.


SH312 (BAY 1)

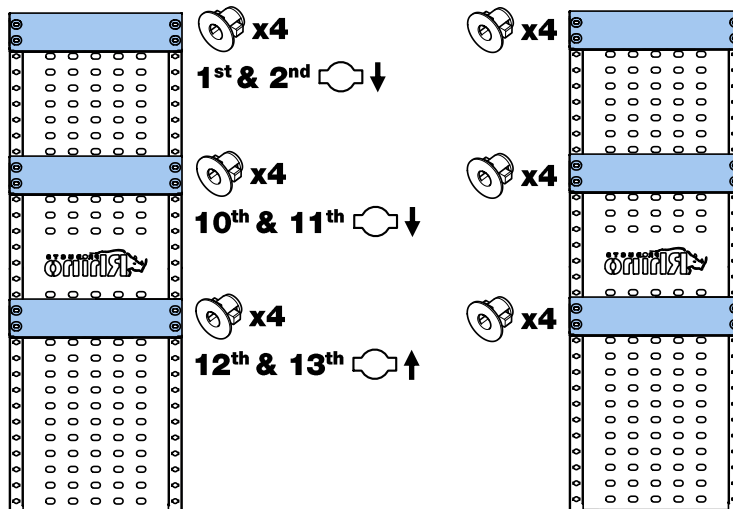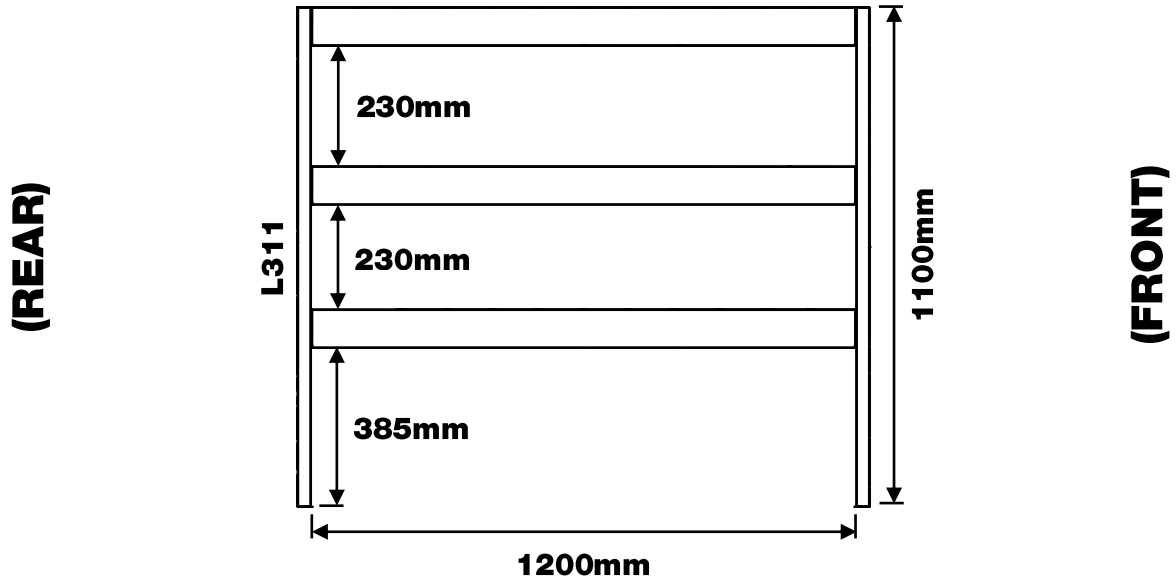

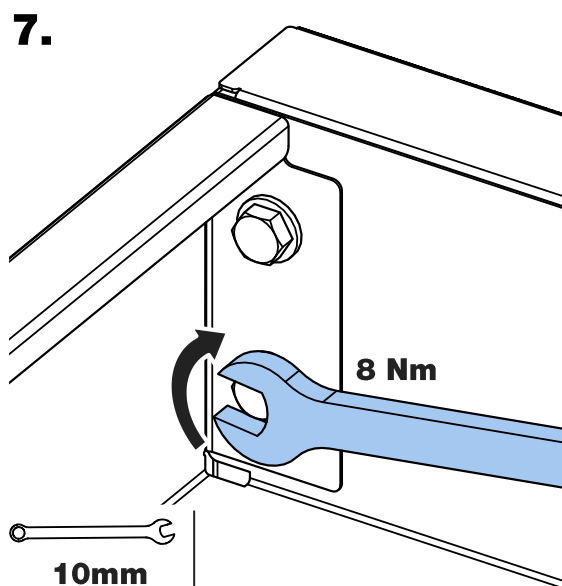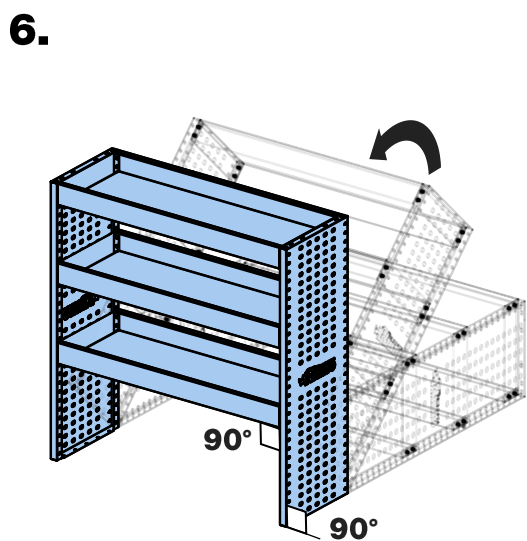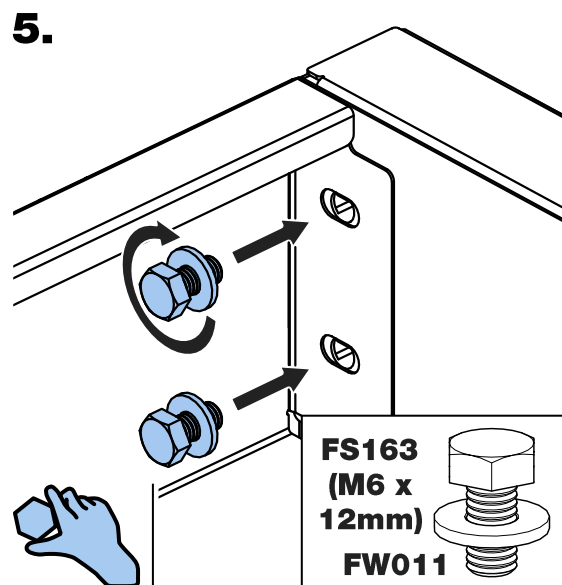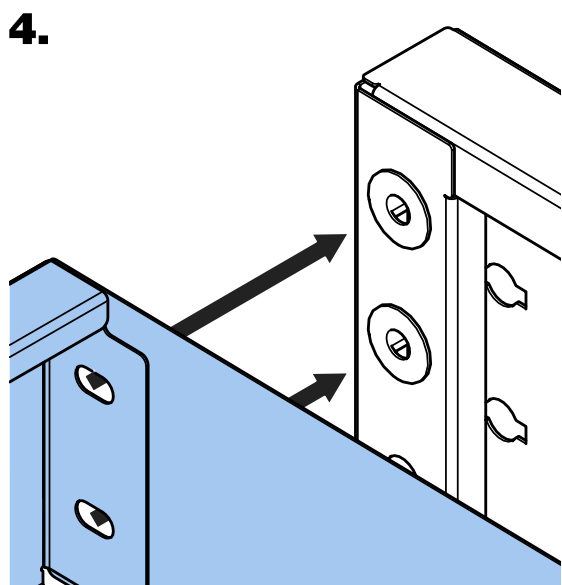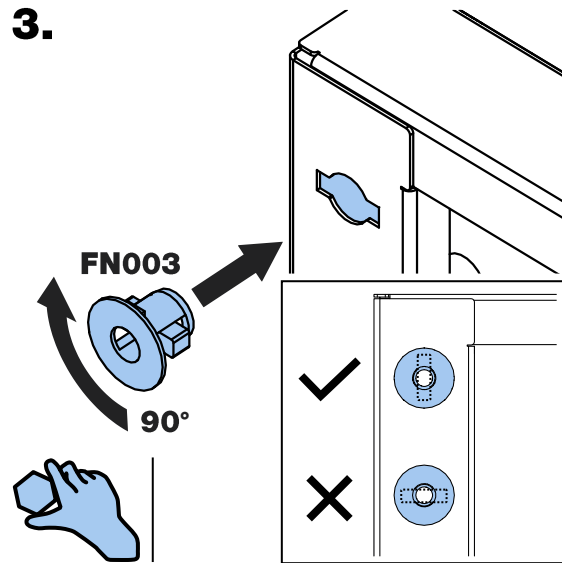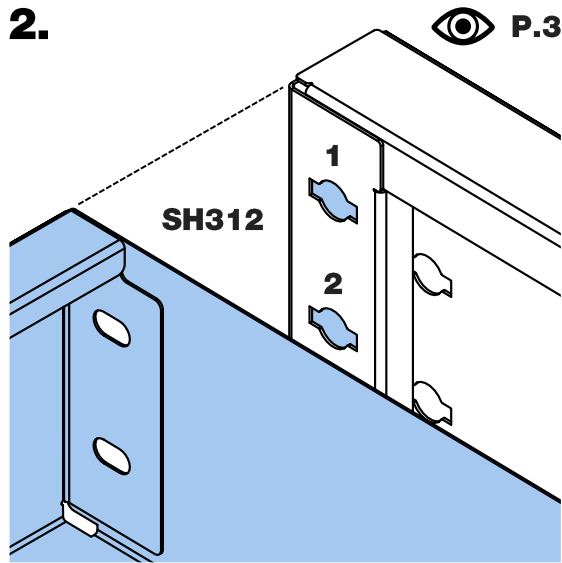


∞.

(REAR)

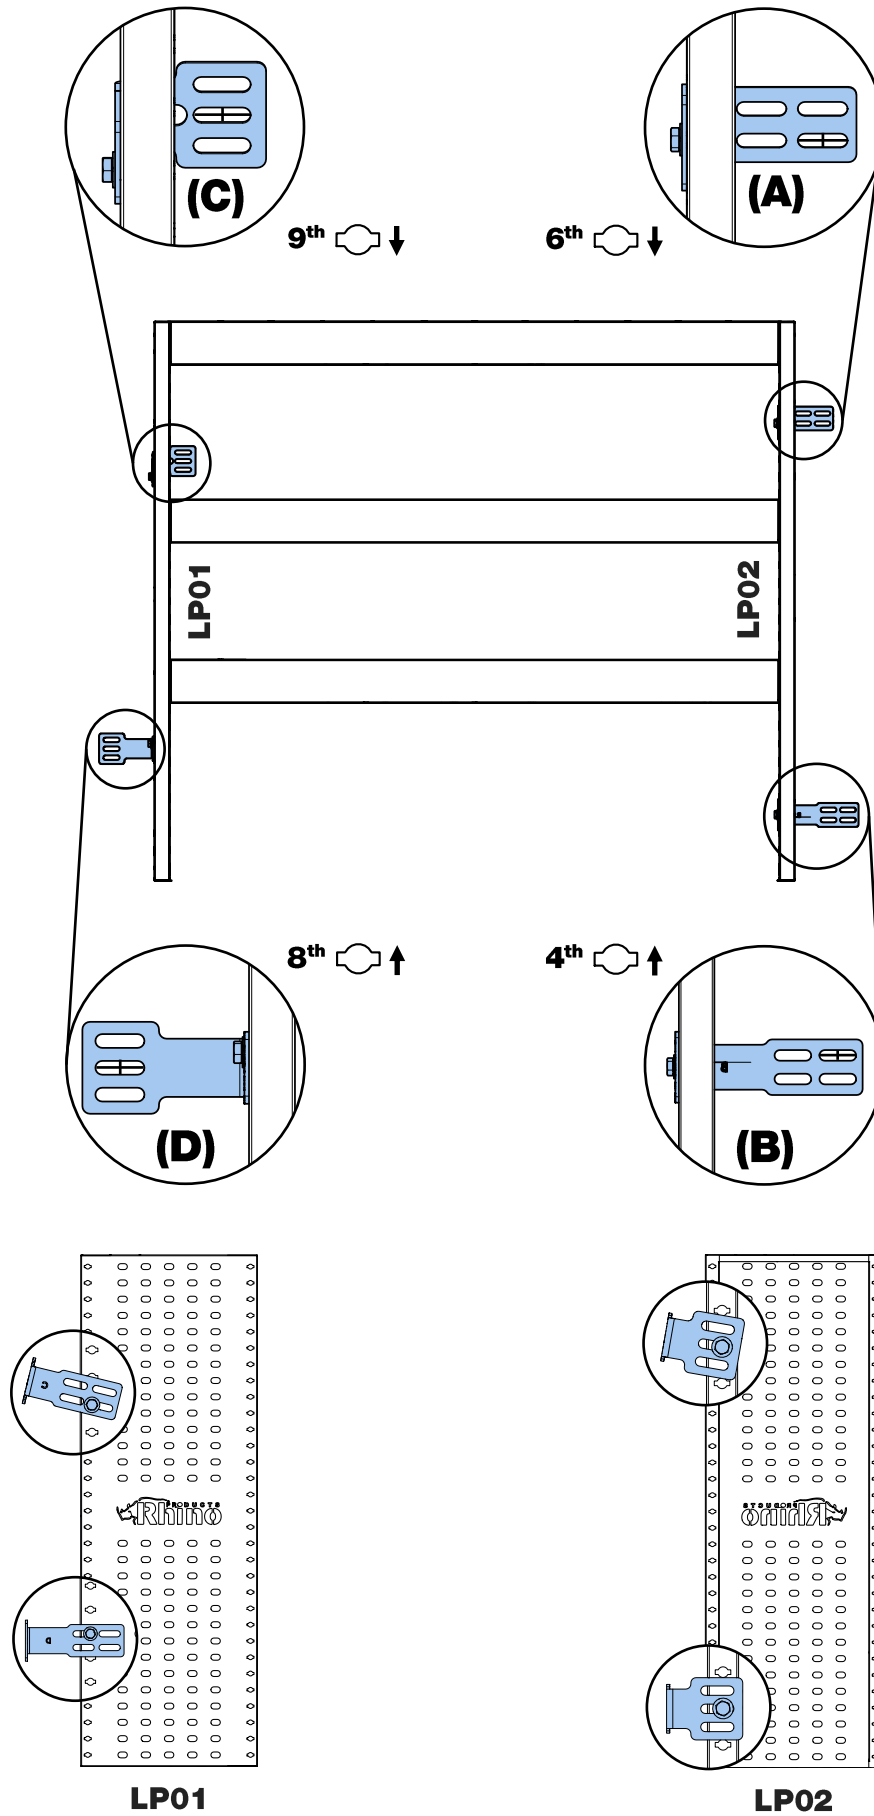


(FRONT)


9.

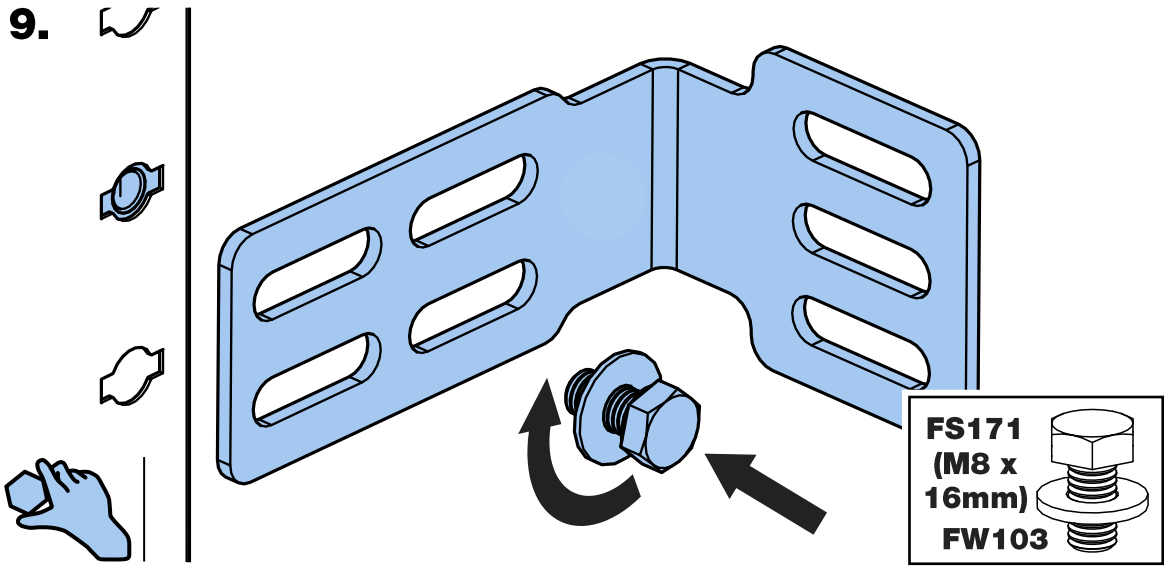


10.

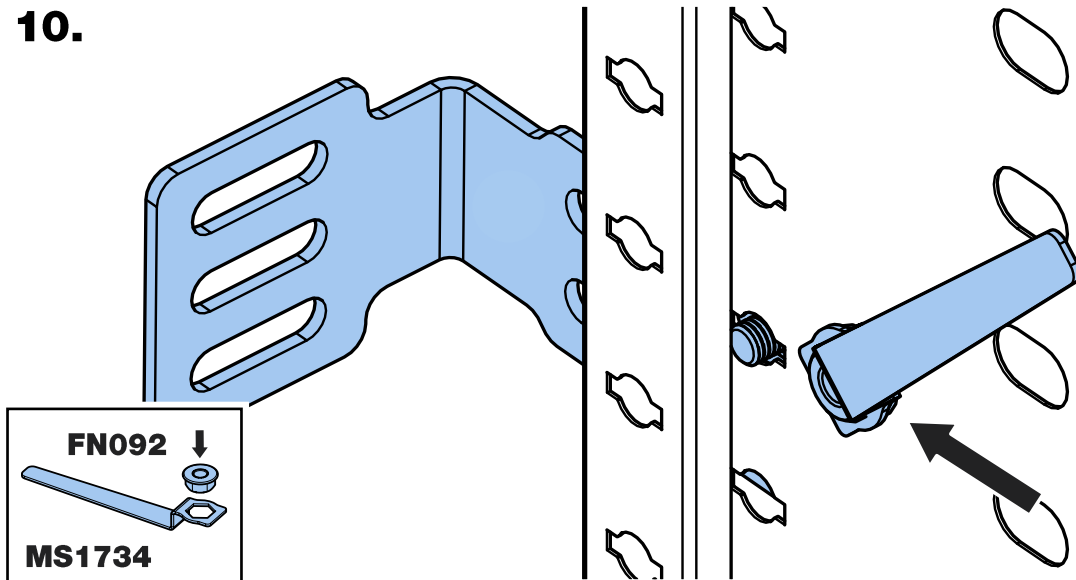


11.

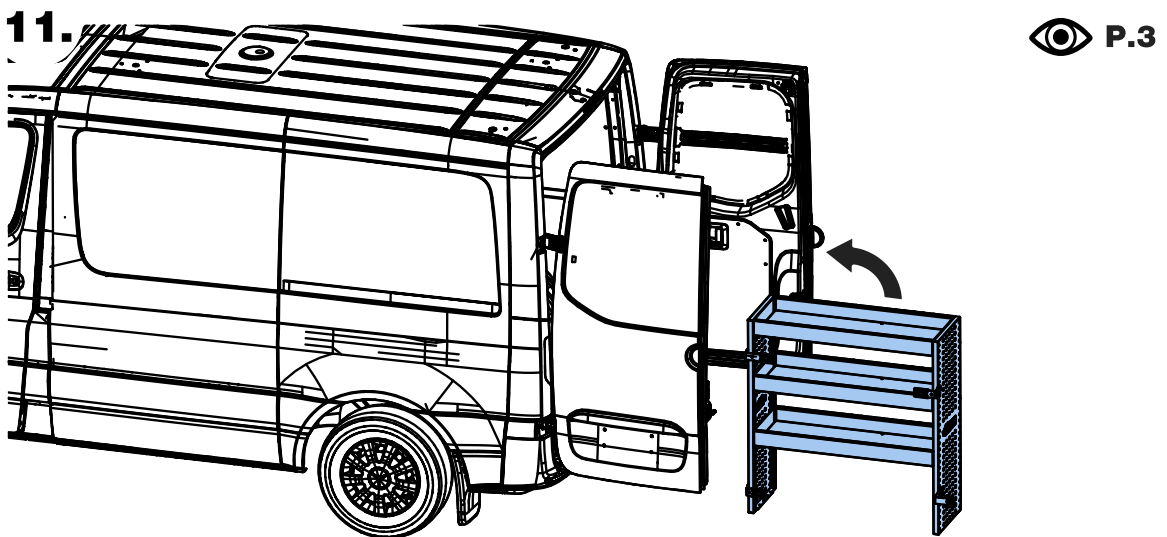


12.




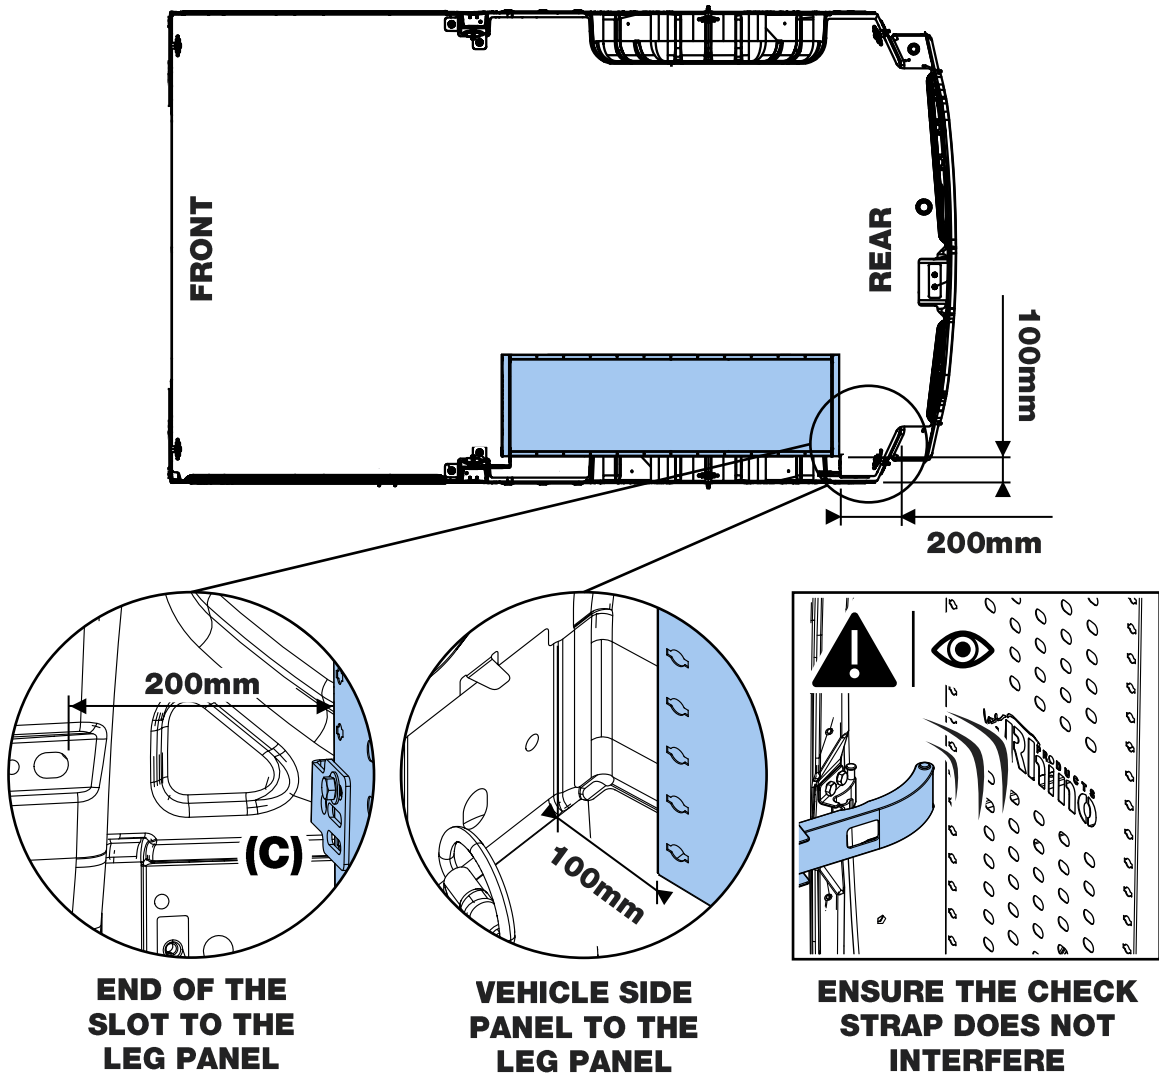


13.

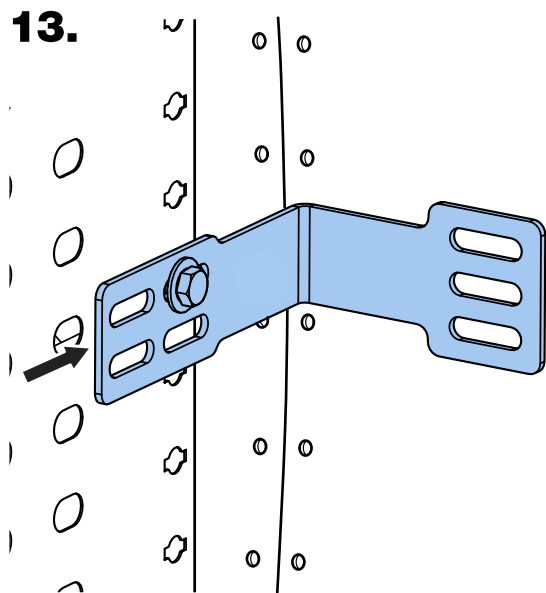


14.

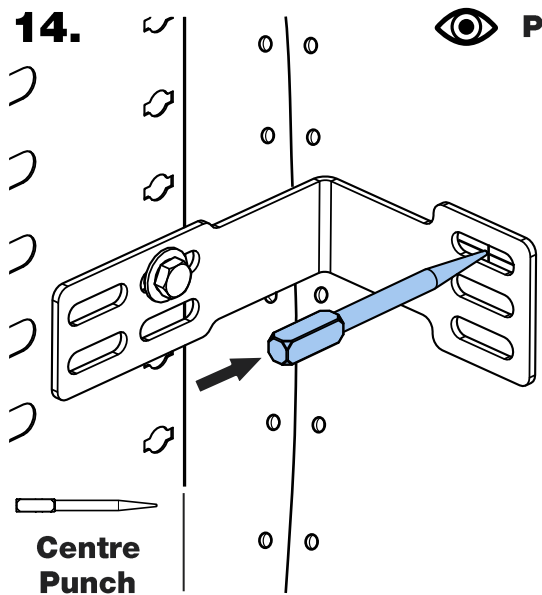


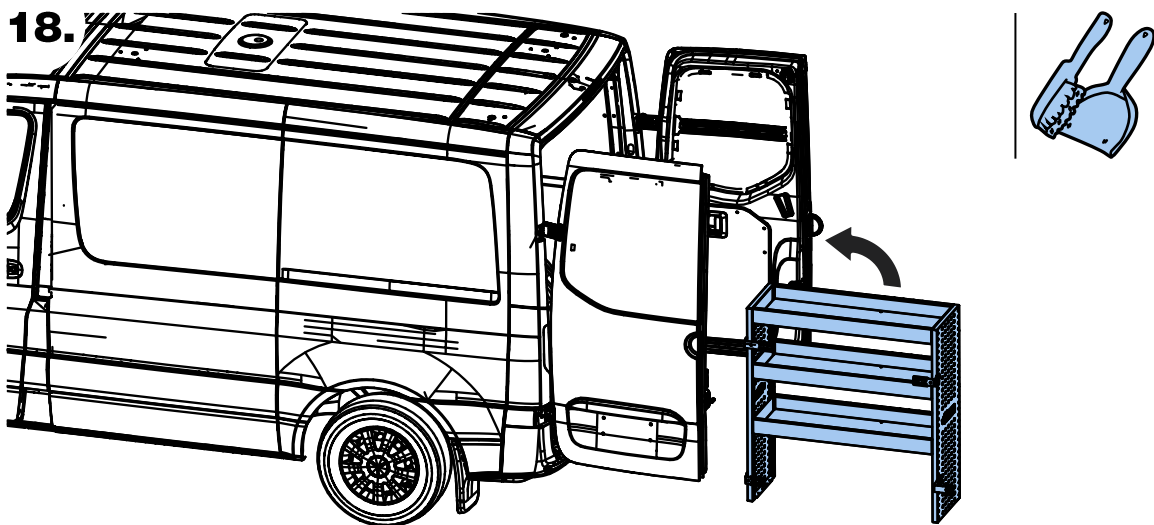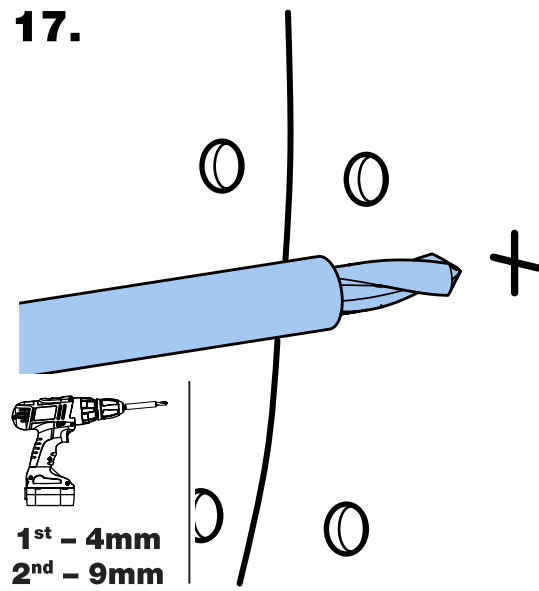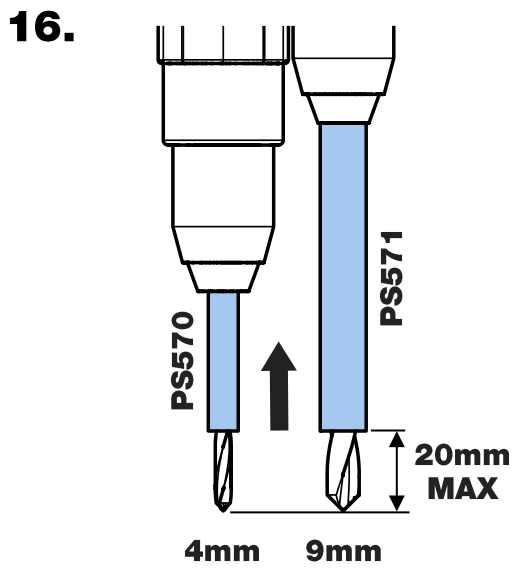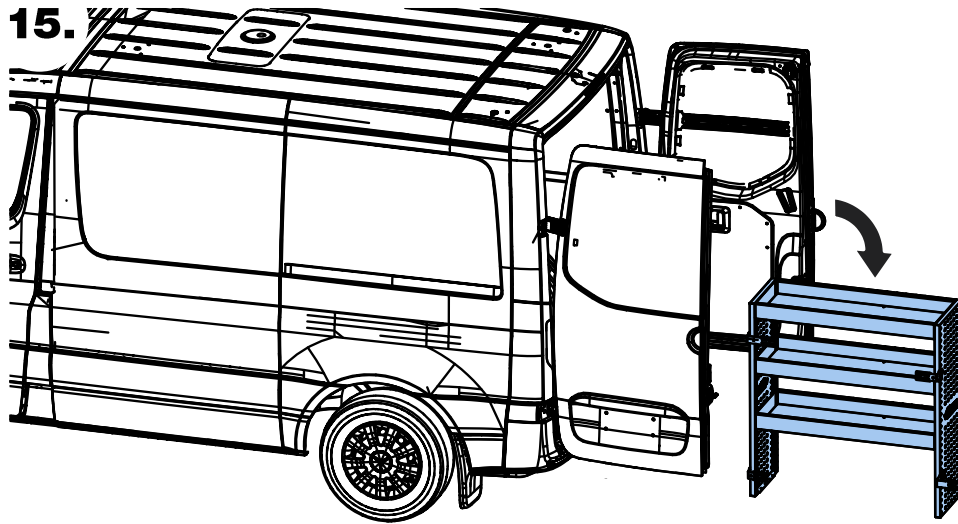


19.

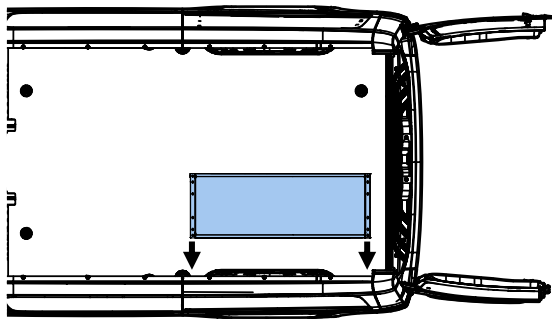


20.

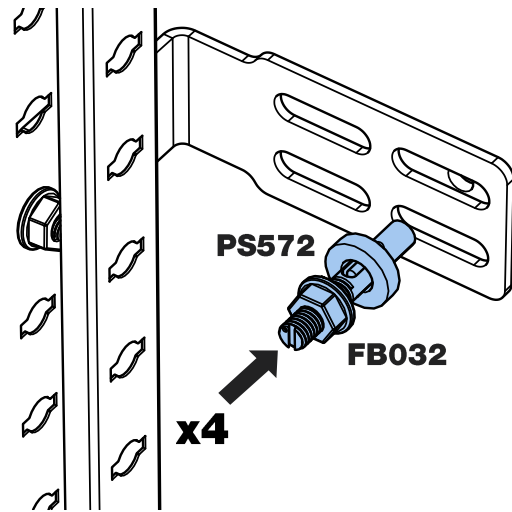


21.

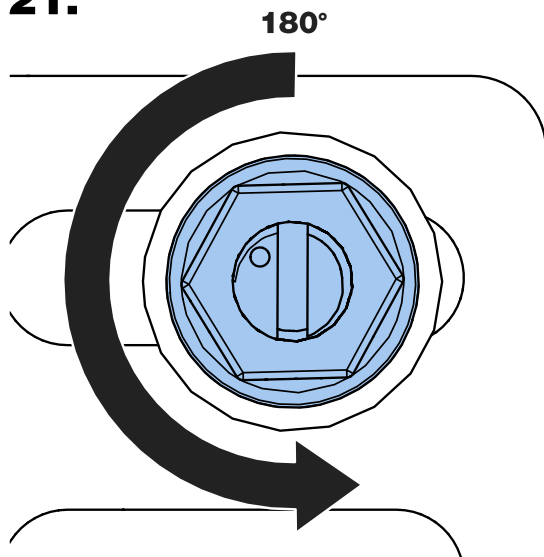


22.

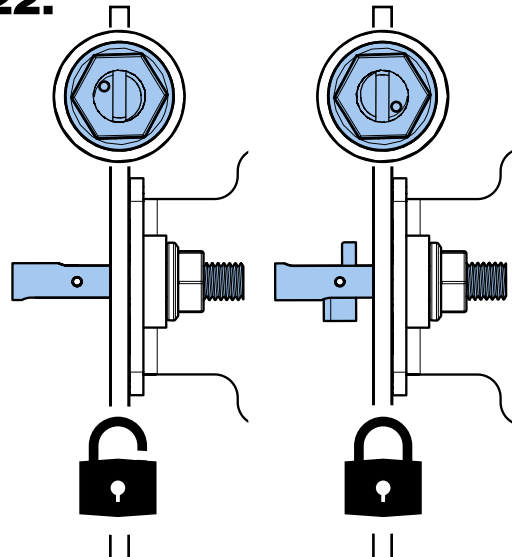


23.

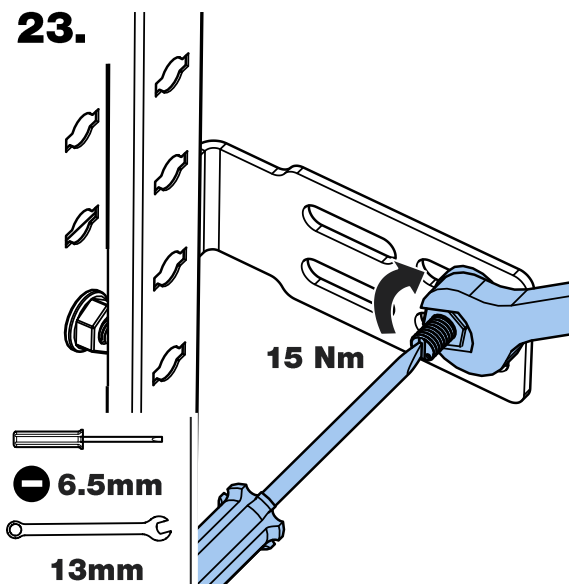


24.

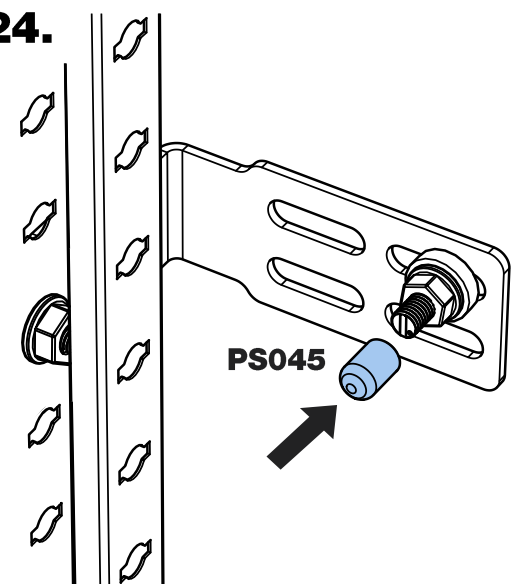


25.

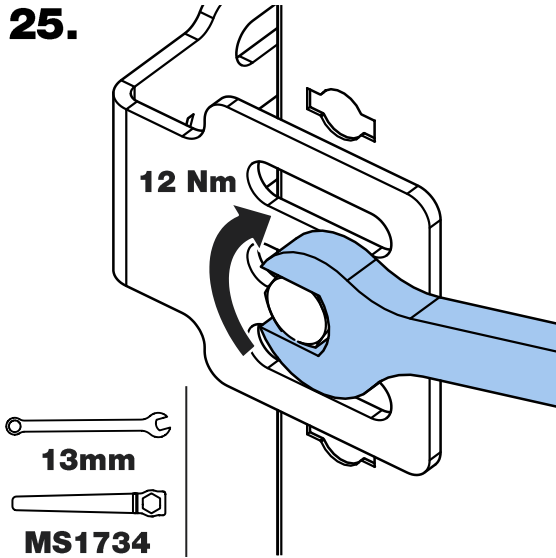


26.

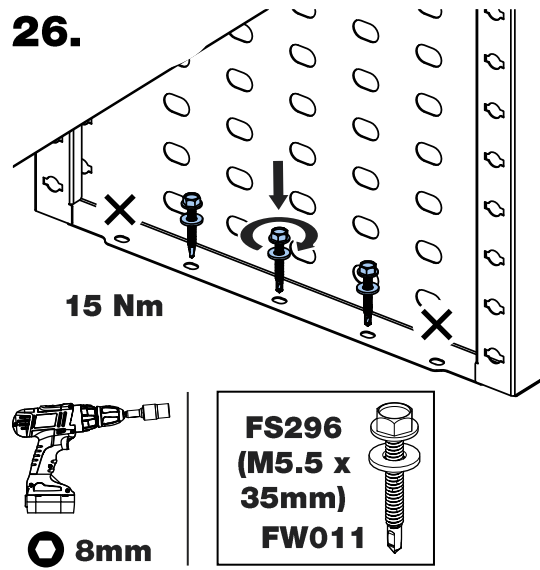

27.

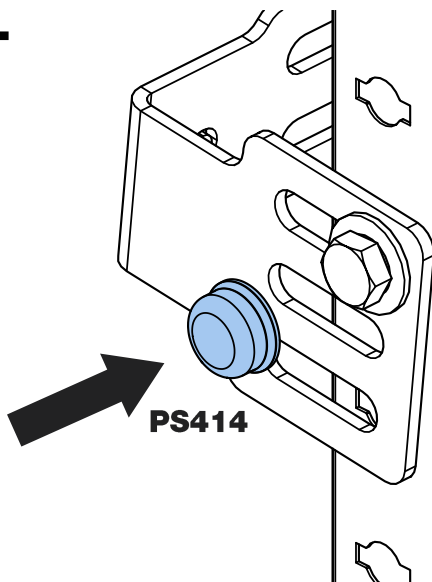

28.

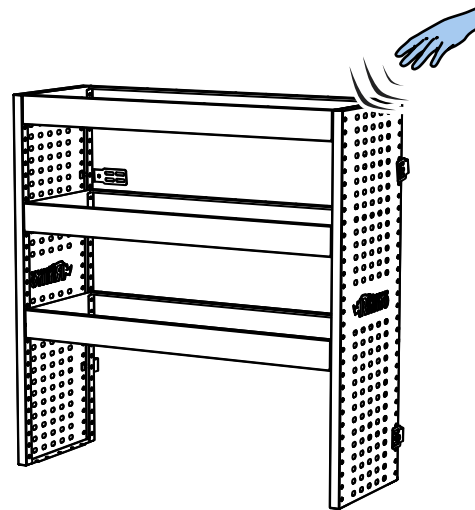

Check every 3 months to ensure the fixings are secure.