

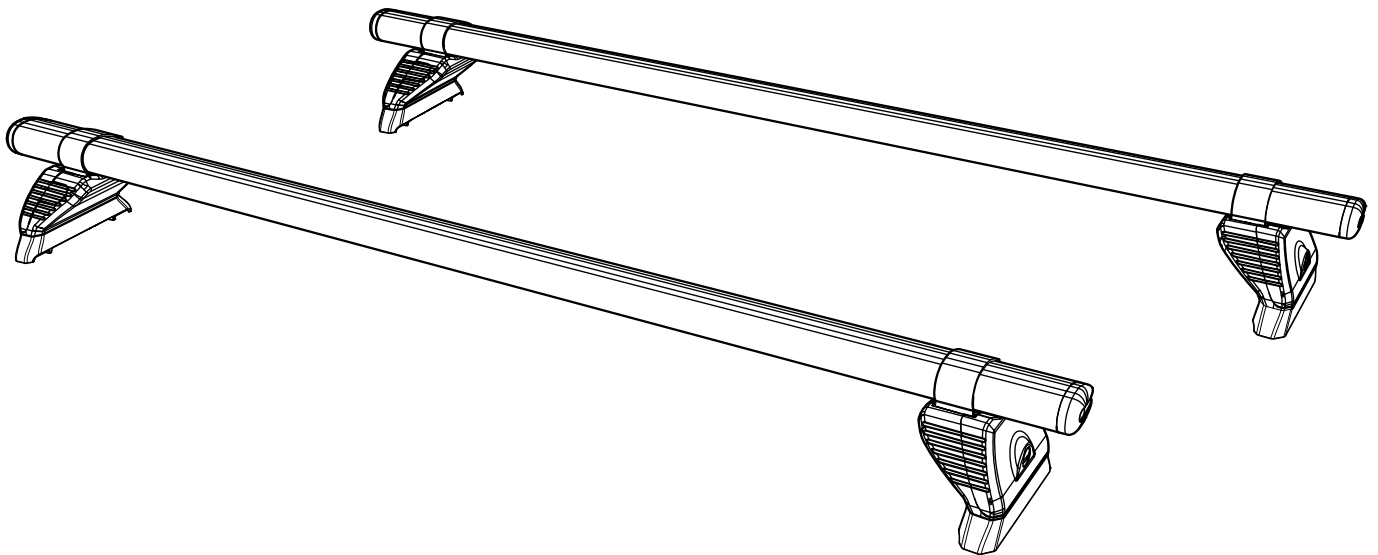
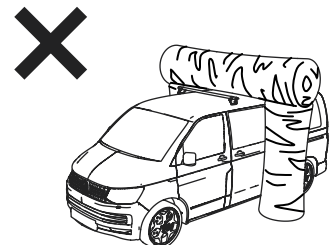


# P2PR/FL KammBar Instructions


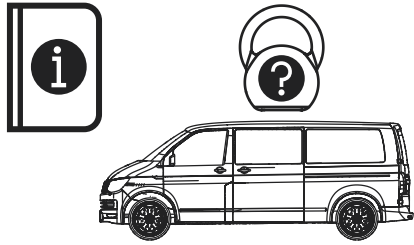


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

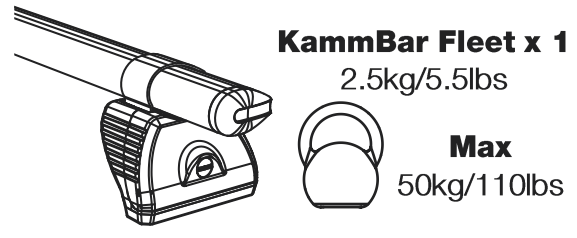




### KammBar Pro

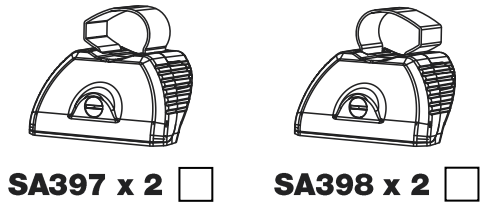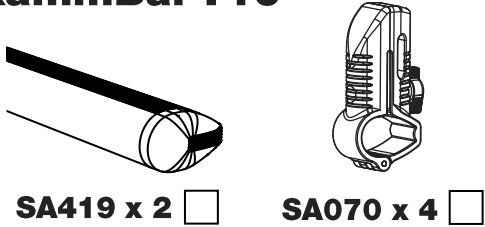

### KammBar Fleet

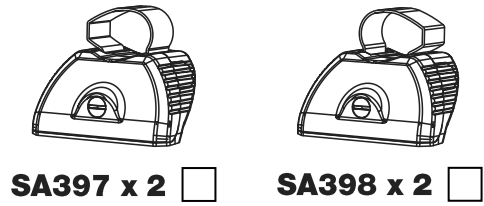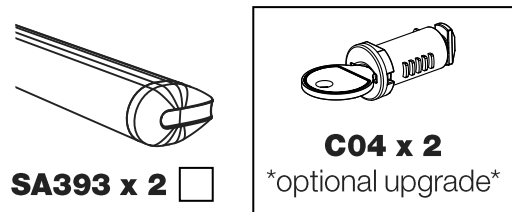

### Fitting Kit

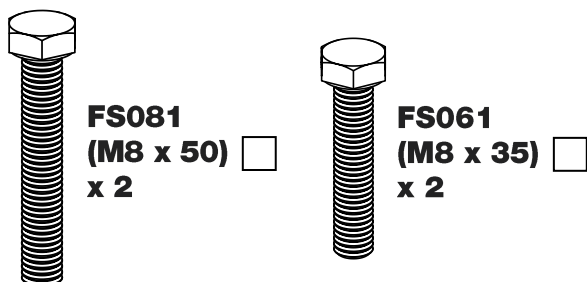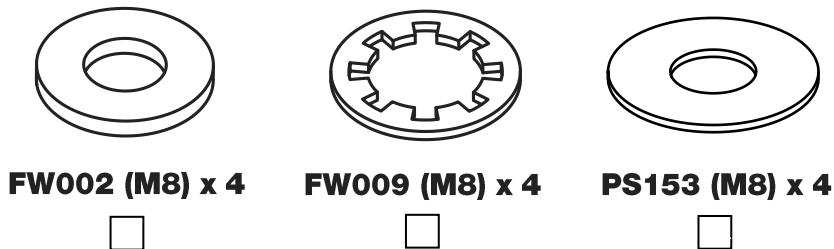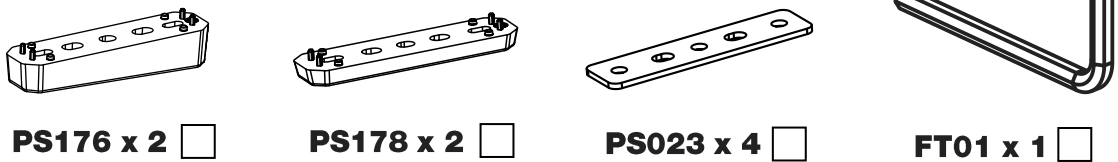


1.



2.



3.





SA397

PS178

SA398

PS178





SA397


PS176

SA398


PS176

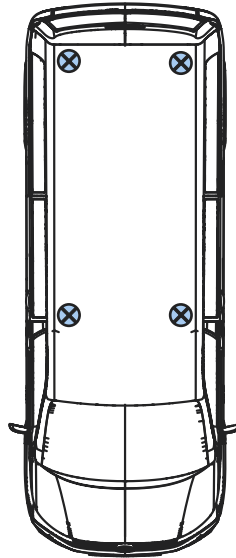


4.

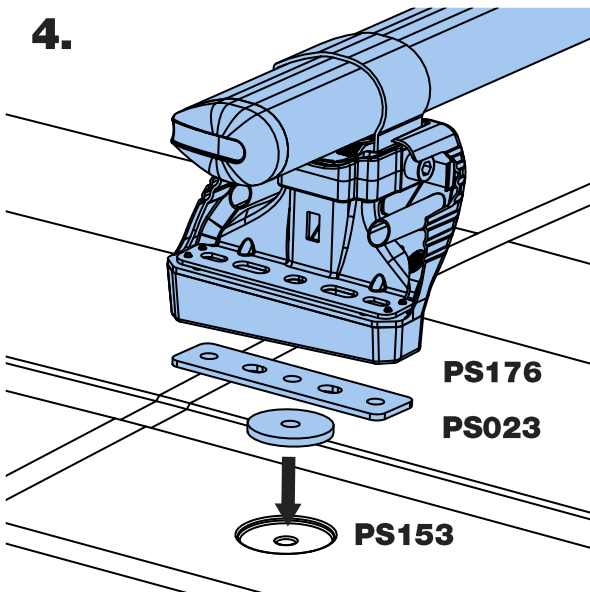


5.

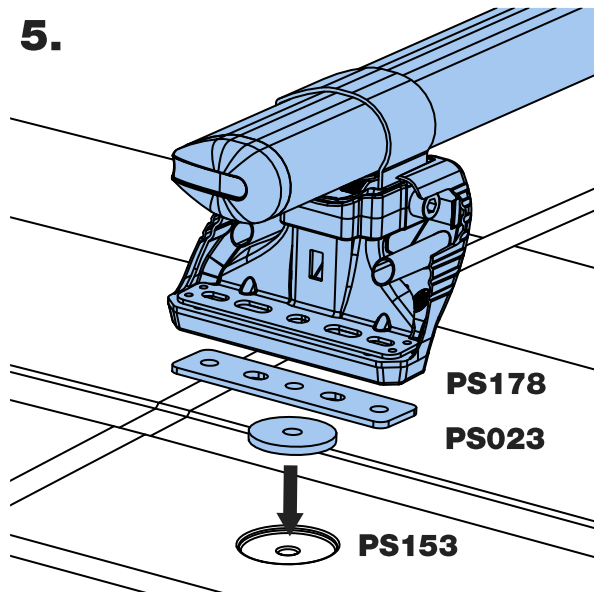

6.

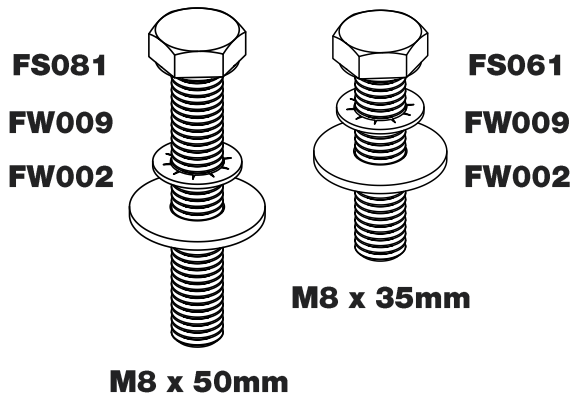


7.

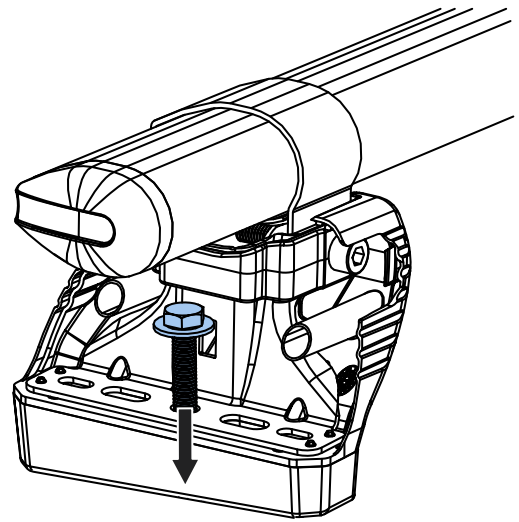


PS176 + M8 x 50mm

8.

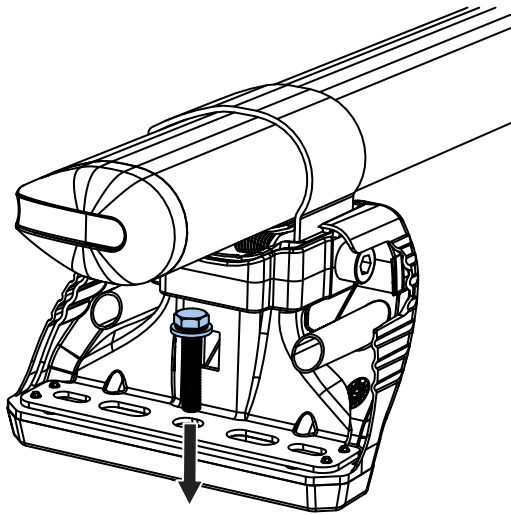


PS178 + M8 x 35mm


9.

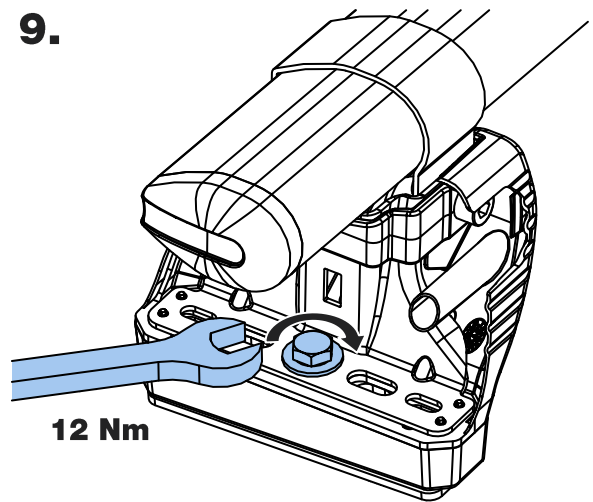


10.

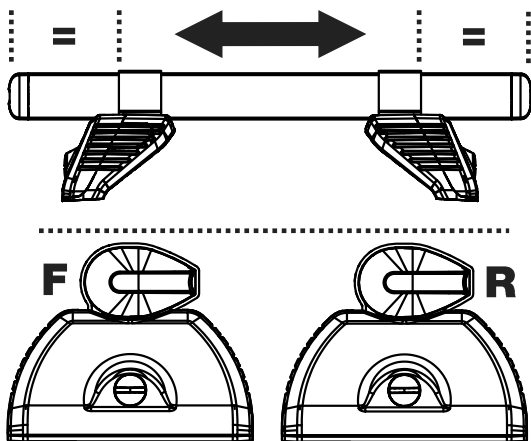

11.

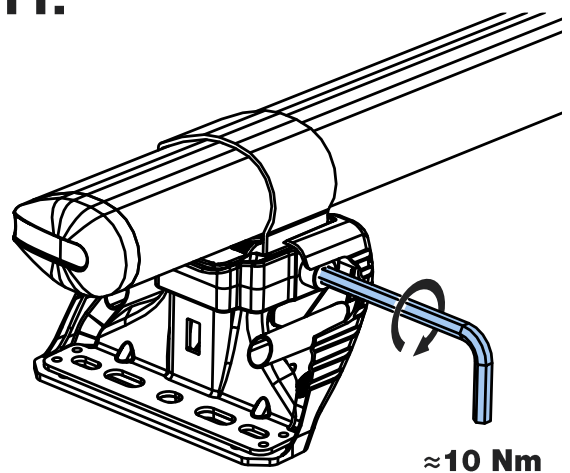

12.

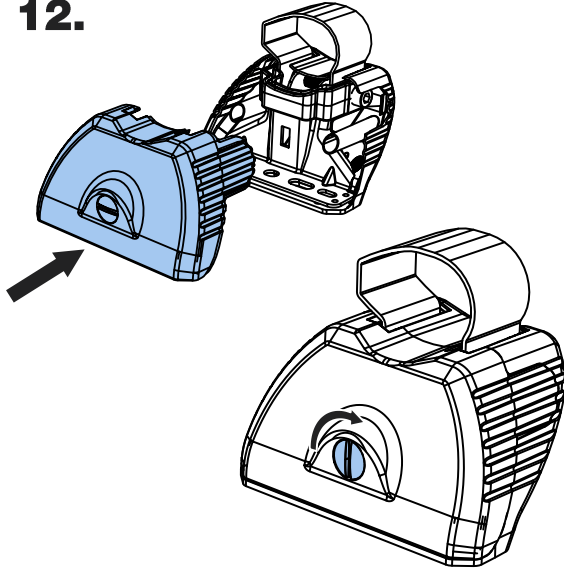

13.

