


TA4PR/FL




KammBar

Instructions

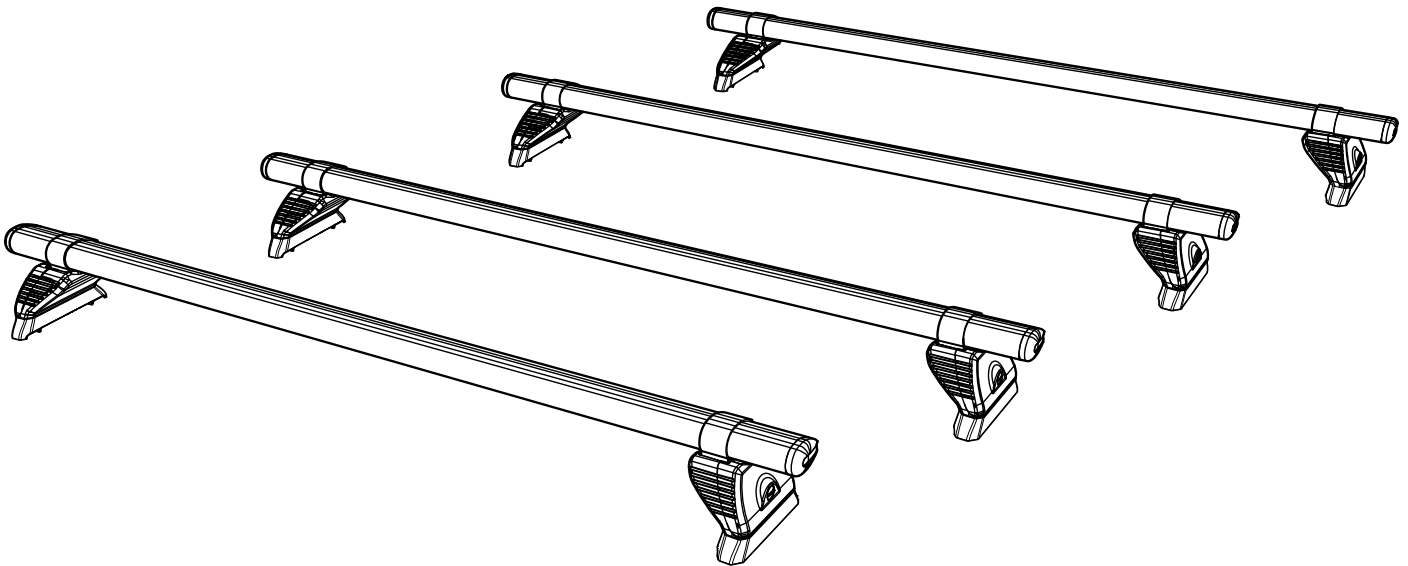


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

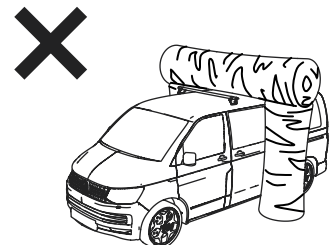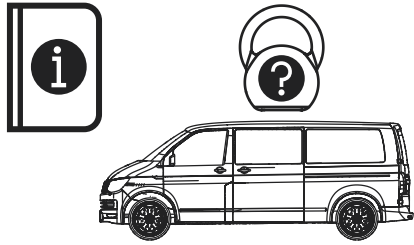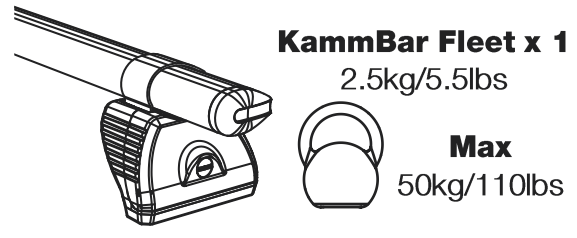


KammBar Pro

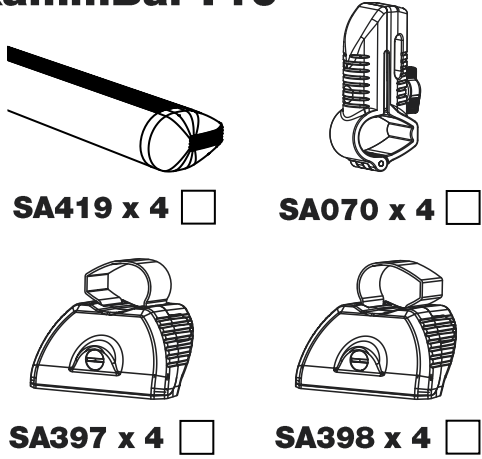

KammBar Fleet

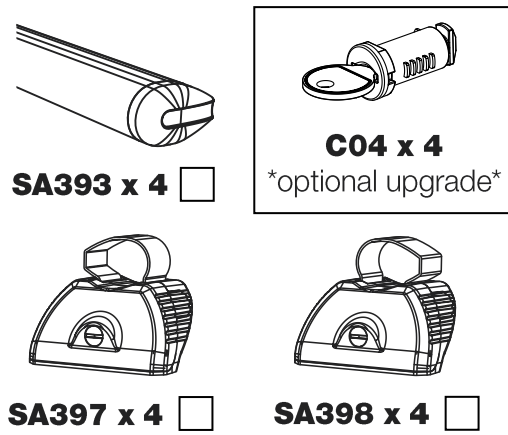


Fitting Kit

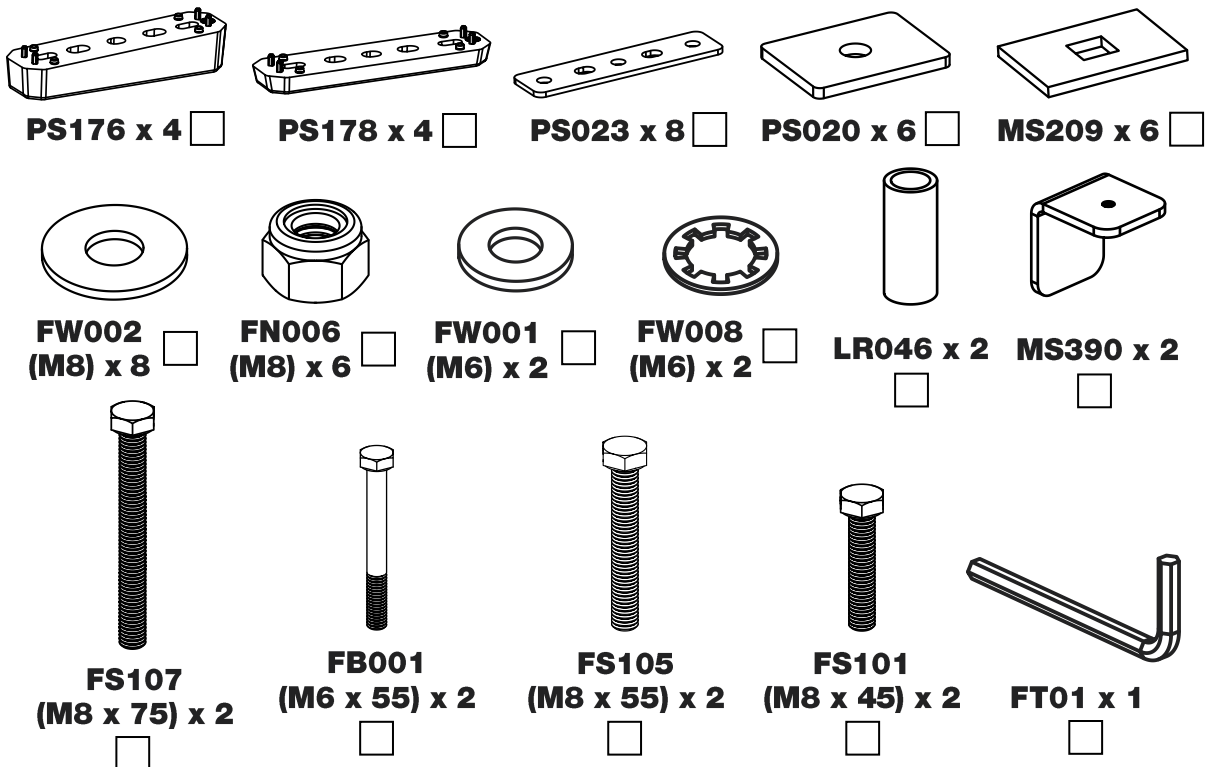


1.



2.

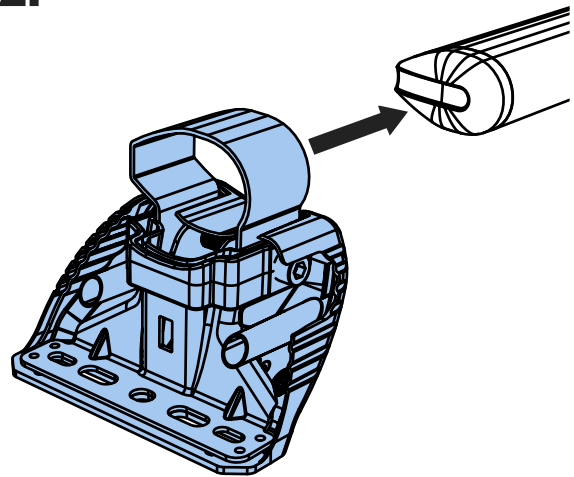


3.



SA397




PS176



SA397




PS178




SA397




PS178




SA397



PS176

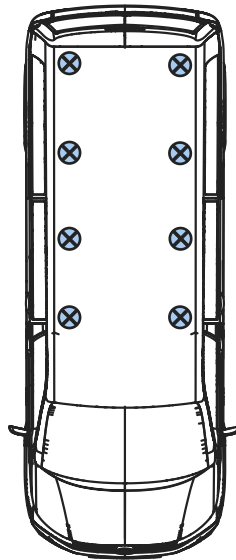


SA398



PS176




SA398



PS178




SA398



PS178





SA398





PS176















4.

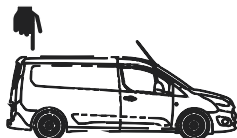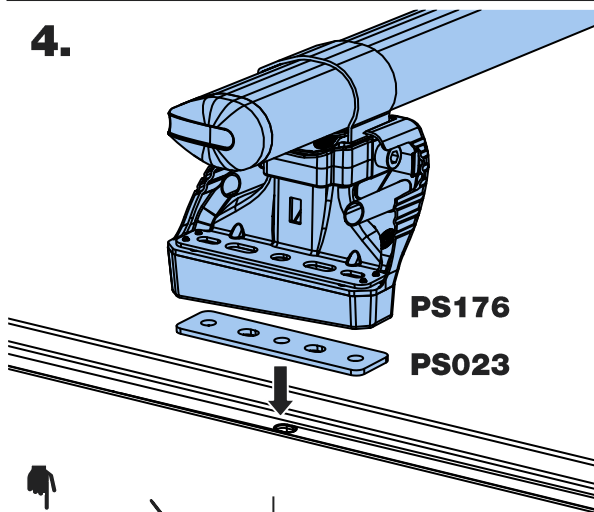


5.

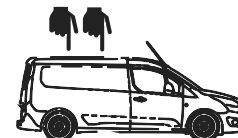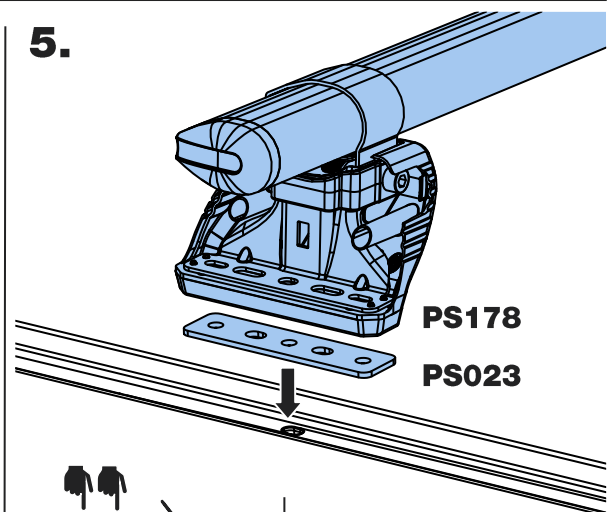

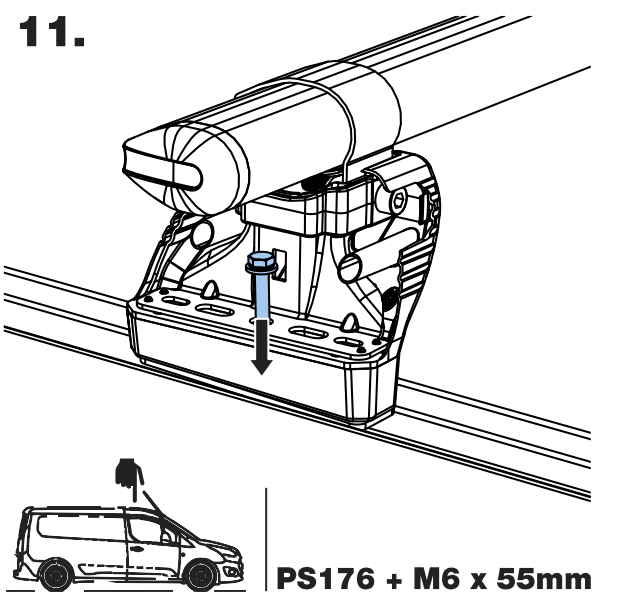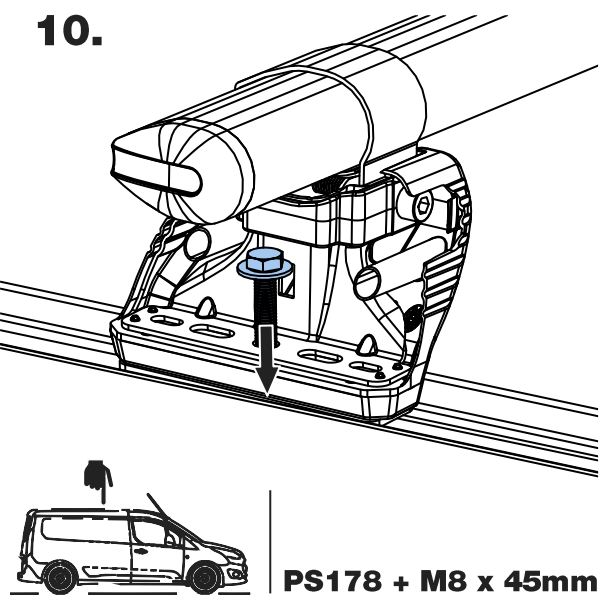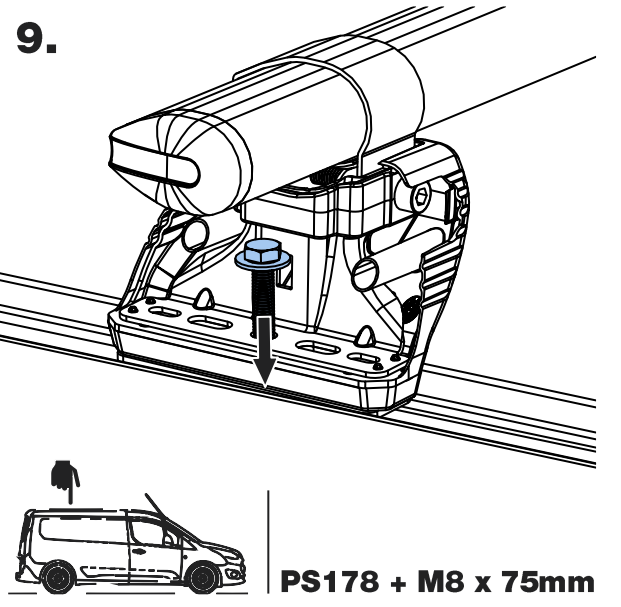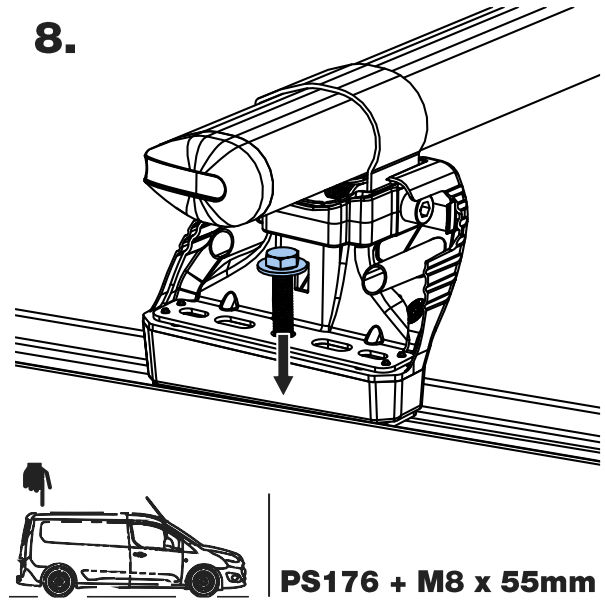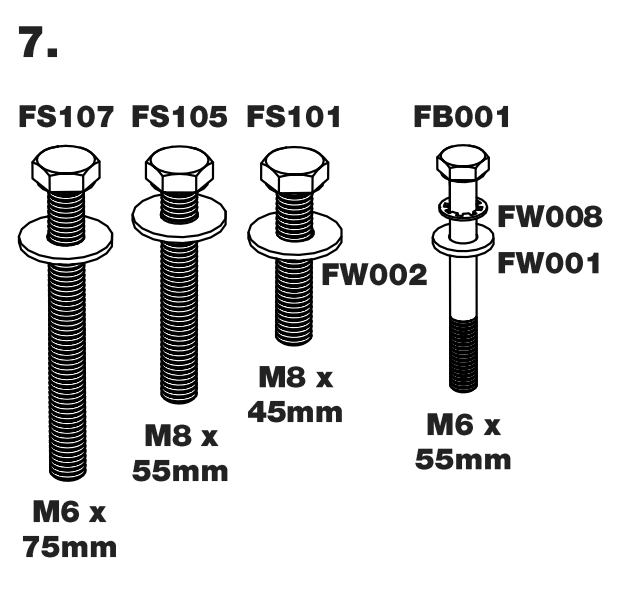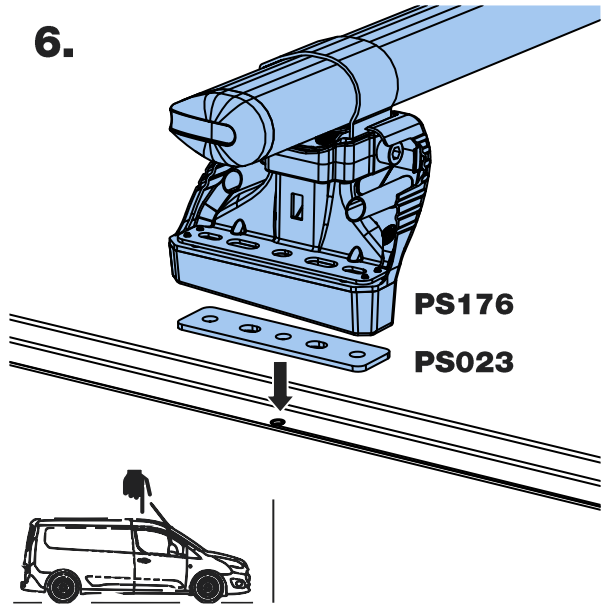

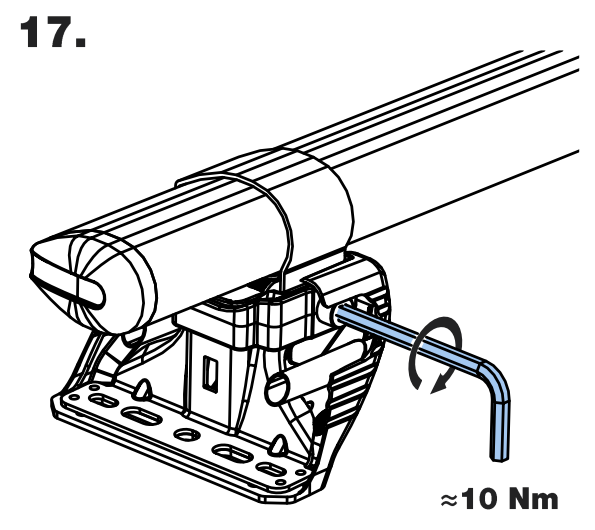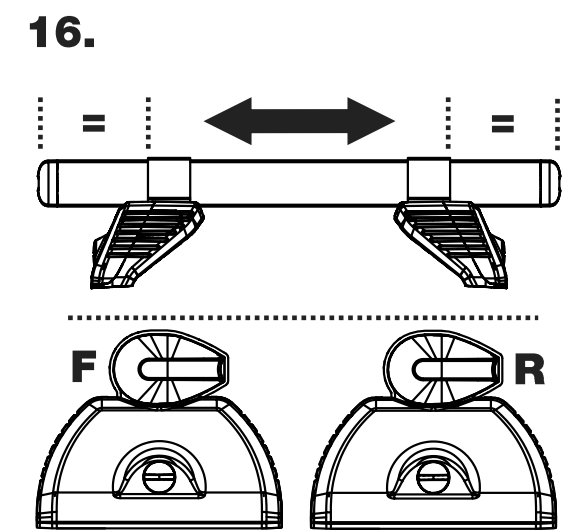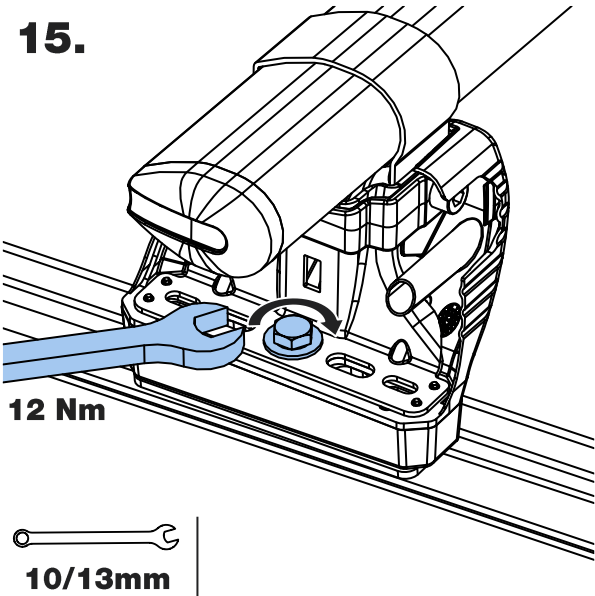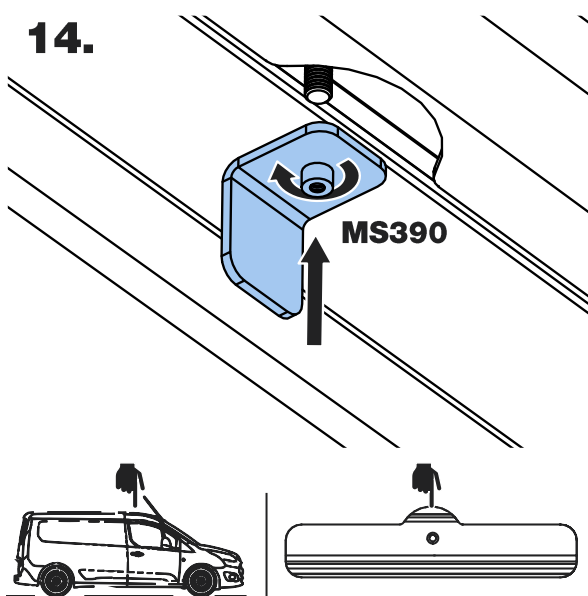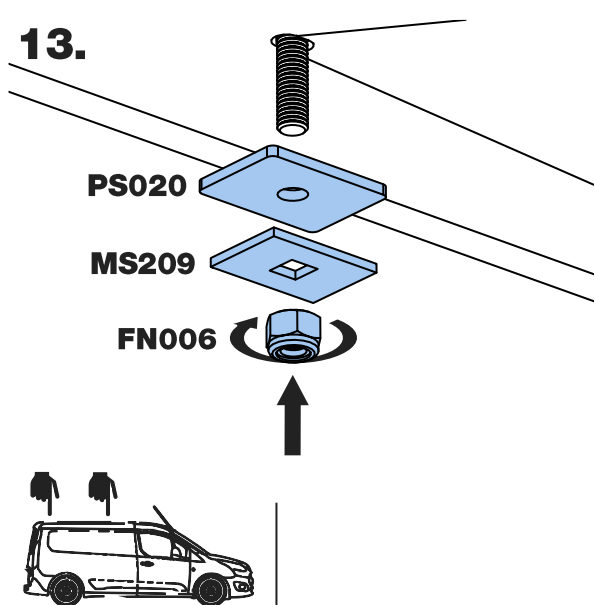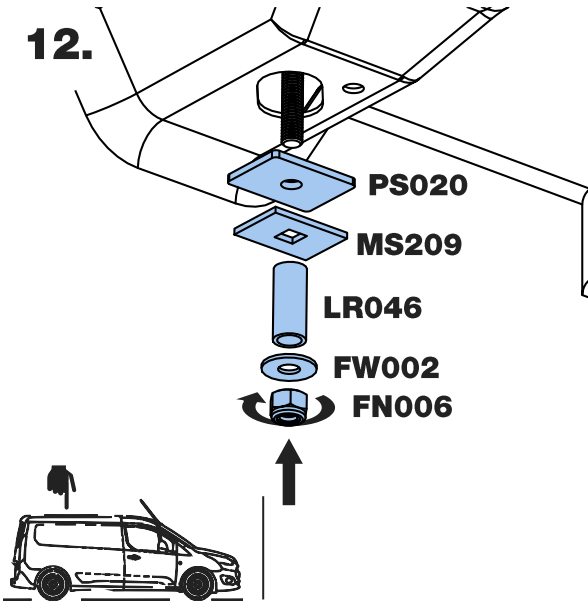

18.

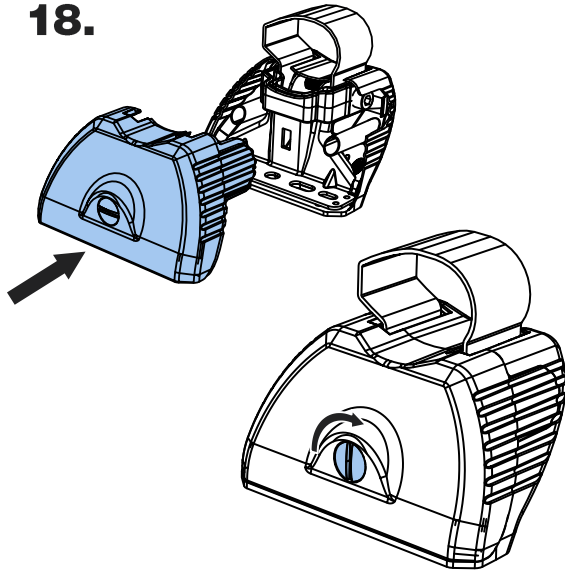

19.

